


# Model 2068 Installation Guide

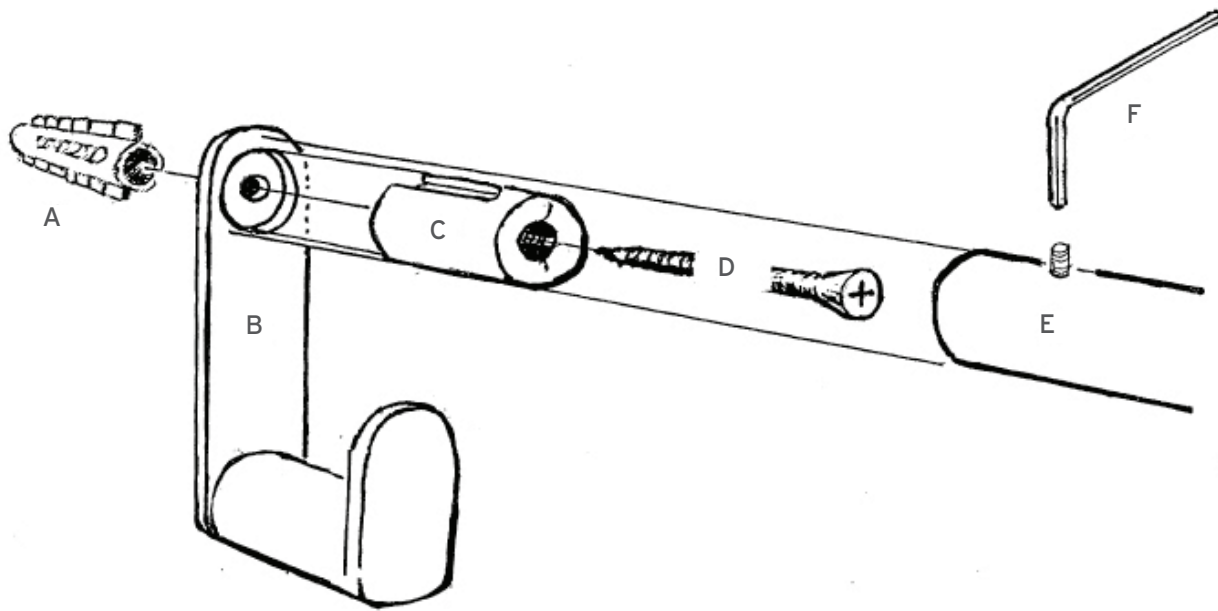

## DRYWALL INSTALLATION

Locate and install supplied plastic wall anchor [A] before proceeding.

## INSTALLATION

Secure bottom hook assembly [B].

Place items [C] and [D] into the top hole, aligning with and connecting to the wall anchor [A], if used.

Slide top hook assembly [E] over [C] and [D].

Tighten Allen screw by placing supplied wrench [F] into the groove of [C].