

WHEELIES MOBILE T-SCREEN ASSEMBLY INSTRUCTIONS

Assembly


1. Align the long panel, at a right angle (90°) to the short panel, so that the (3) tension locks are inserted into the slots on the short panel.
2. Using the wrench (included), tighten all (3) locks by turning clockwise until they stop. (1/2 turn).
3. Insert the cover caps over the locks.

Cleaning : Porcelain Panels

1. Wipe the board with a clean cloth moistened with a non-ammoniated liquid cleaner.
2. Rinse with clear water. THIS IS A VERY IMPORTANT STEP!
3. Wipe dry with a clean cloth.
4. If the board is used daily, this cleaning should be performed at least two to three times a week. More thorough cleaning may be required if writing is left on the board for more than 2 days.

Cleaning : Translucent Lumifiber & Melamine Panels

1. Wipe the board with a clean cloth moistened with a liquid cleaner.
2. Wipe dry with a clean cloth.

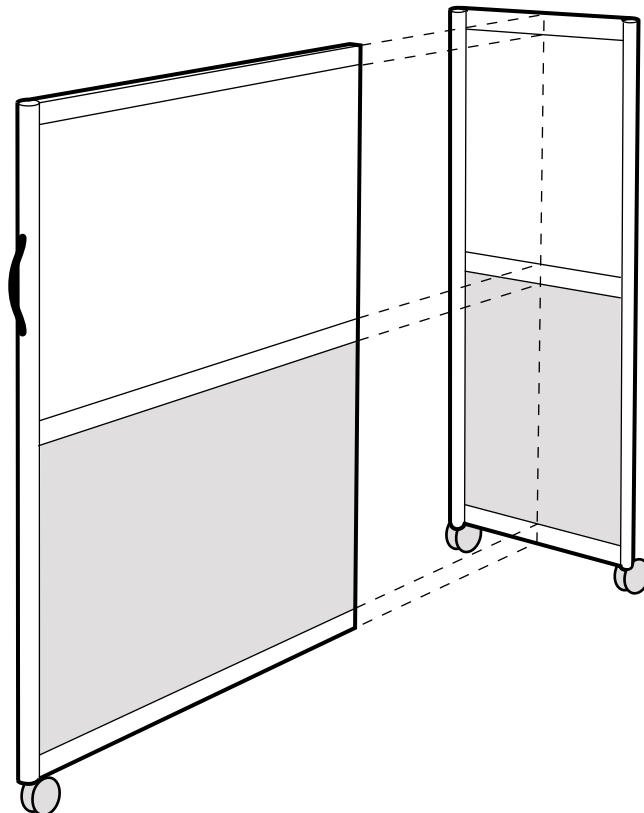

CAUTION : THESE INSTRUCTIONS ARE INTENDED FOR **DRYWALL INSTALLATION ONLY!** IF INSTALLATION IS TO BE OTHER THAN DRYWALL, THE INSTALLER SHALL CONTACT CUSTOMER SERVICE FOR APPROPRIATE INSTRUCTIONS.

PLEASE NOTE: THESE INSTRUCTIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.



Peter Pepper Products, Inc. • T: 310.639.0390 x 7 • F: 310.639.6013 • E: customerservice@peterpepper.com